


ATCAL 4001

Liquid circulation baths have been used for decades for calibration of Temperature Sensors, Temperature Gauges and Thermostats. It is easy to achieve uniformity and homogeneity of temperature within the liquid by stirring it. This stirred medium when heated, using immersion type electrical heaters and controlled using an accurate precision temperature controllers acts a stable heat source. This stable heat source is used for calibration.

Temperature Calibration in the industry is normally done by comparison Technique. The Unit being calibrated is immersed in to a stable heated Cooled medium along with a sensors of known accuracy and the reading of both are compared to find out the temperature deviation.

| | |
|-------------------------------|---|
| Model | : "AQUACAL" |
| Temp. Range | : Ambient to 100°C |
| Medium | : Pure Water |
| Temperature Control | : By Auto Tune PID Controller |
| Temperature Uniformity | : $\pm 0.3^\circ\text{C}$ |
| Temp. Stability | : $\pm 0.2^\circ\text{C}$ |
| Resolution | : 1°C |
| Accuracy | : $\pm 0.5\%$ |
| Heating Load | : 2.5 KW |
| Stirring Load | : 100 Watts |
| Power Supply | : 230 V AC $\pm 1\%$ 50 Hz |
| Chamber Size | : 3.5" x 2" x 2.5" |
| Weight | : 35 Kgs. |
| Accessories Standard | : Instruction Manual |
| Optional | : 1) Master Sensors 2) Spare Heaters 3) Trolley |

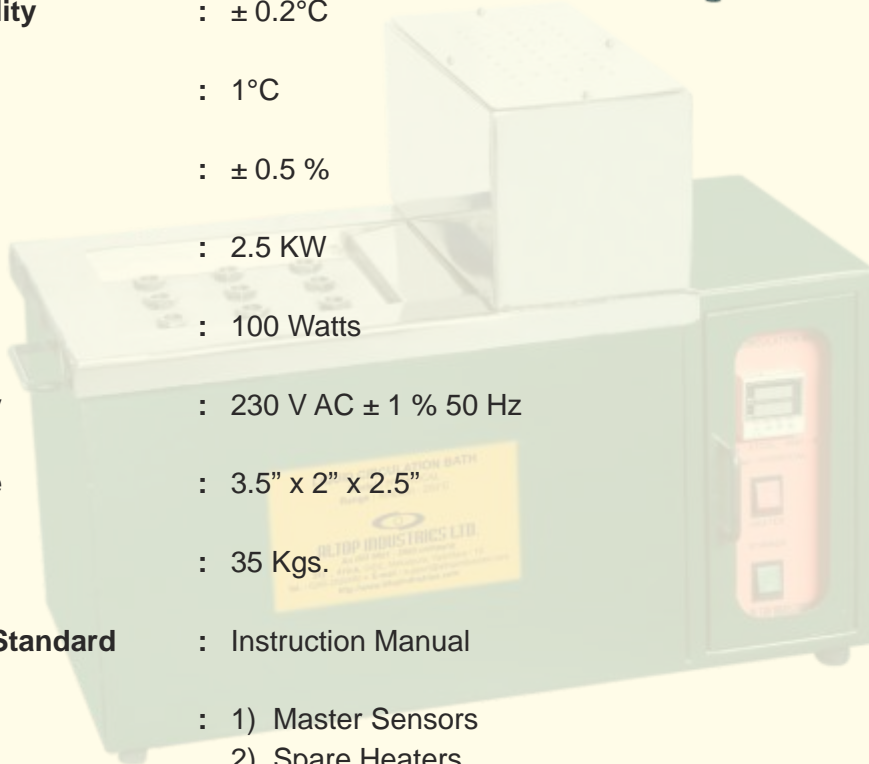

Corporate & Mktg. Office : 165, G.I.D.C. Makarpura, Vadodara 390 010. Tel. : +91 - 265 - 2643550, 2646021.
■ Fax : + 91 - 265 - 2641054 ■ E-mail : marketing@altopindustries.com

Factory : 392 , 419-A, GIDC, Makarpura, Vadodara - 390 010.
■ Tel. : 0265-2658480 ■ E-mail : support@altopindustries.com

MUMBAI : 5, Turakhia Park, Shopping Complex, Building No. 1, Next to Corporation Bank, M. G. Road, Kandivali (W) MUMBAI - 400 067. ■ Tel. : (022) 2806 6032 / 2806 6036 ■ Fax : (022) 2862 9113
■ Email : bombay@altopindustries.com



ALTOP Industries Ltd.
PROCESS CONTROL INSTRUMENTATION

CIN - U91110GJ1993PLC018831

<http://www.altopindustries.com>